

## 1. Installation Procedure

Insert valve into housing by hand, turning clockwise until you are sure the valve is threading correctly. Use valve key when tightening down valve to ensure a good seal.

**CAUTION:** Starting the valve with valve key may cause mis-threading and damage to either valve threads or housing threads.

## 2. Removal Procedure

Use valve key to break seal, turning counterclockwise, and remove valve.

*Fillauer*®

PM194/12-04

