




Prefabricated Forearm

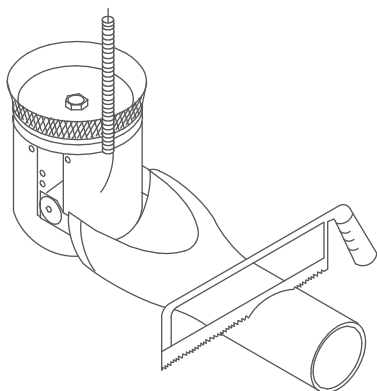

1. Cut forearm to desired length.

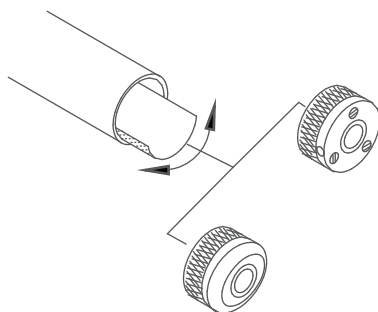

2. Roughen surface with sandpaper before attaching wrist.

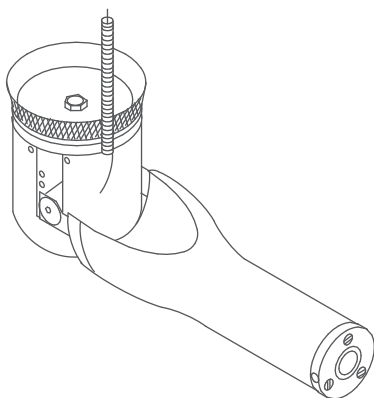

3. Apply **50985** epoxy to wrist
4. Press wrist into forearm.
Allow epoxy to cure.

Fillauer®

www.fillauer.com

Fillauer LLC

2710 Amnicola Highway
Chattanooga, TN 37406
423.624.0946
Fax 423.629.7936



© 2025 Fillauer LLC
70982 09-25